


ASSEMBLY-DD5001-HORIZONTAL TAIL

FIGURE N°	PART NUMBER	NOMENCLATURE / DESCRIPTION	QUANTITY PER SET	MEASURE UNIT
1	HT	Horizontal stabilizer	1	PC
2	E	Elevator	1	PC
3	EC	Elevator trimming plate	1	PC
4	SB01	Horizontal stabilizer main spar	1	PC
5	FF02	Horizontal tail front lifting lug mount	1	PC
6	SAF01	Horizontal stabilizer 1# nose rib	1	PC
7	HE02	Fixed fuselage copper bush	2	PC
8	SF01	Horizontal stabilizer main spar copper bush	2	PC
9	ECF01	Elevator trim arm base	1	PC
10	VK14	Elevator trimming steering gear	1	PC

ASSEMBLY-DD5001-HORIZONTAL TAIL

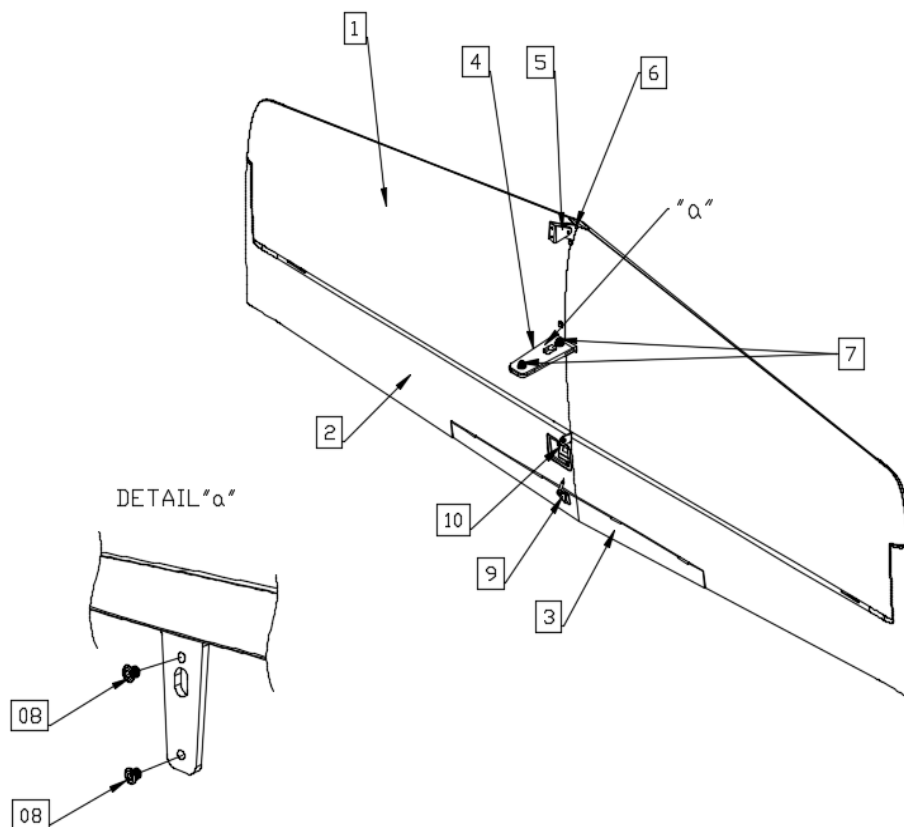

ALPHA NUMERIC PARTS LIST

PART NUMBER		ASSEMBLY	PAGE N°	FIGURE N°
HT		ASSEMBLY-DD5001	1	1
E		ASSEMBLY-DD5001	1	2
EC		ASSEMBLY-DD5001	1	3
SB01		ASSEMBLY-DD5001	1	4
FF02		ASSEMBLY-DD5001	1	5
SAF01		ASSEMBLY-DD5001	1	6
HE02		ASSEMBLY-DD5001	1	7
SF01		ASSEMBLY-DD5001	1	8
ECF01		ASSEMBLY-DD5001	1	9
VK14		ASSEMBLY-DD5001	1	10